



Firmware Update Guide

Zero Pi Fighting Board




This document describes how to update the firmware of Brook Zero Pi Fighting Board.

- ⚠ **NOTE** : The update must be done on a PC; it cannot be done on a console.
- ⚠ **NOTE** : Make sure your PC is connected to the internet.
- ⚠ **NOTE** : Disable antivirus before executing the program.
- ⚠ **NOTE** : The ONLINE version firmware just needs to be downloaded once. The following firmware updates will be executed online with this program.

STEP 1 Download the update files from “**Download**” on Brook website:

www.brookaccessory.com

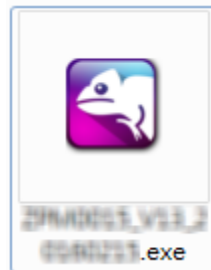


STEP 2 Press and hold **1K** and **START** buttons at the same time. While holding down these buttons, connect the USB to the computer.




STEP 3 When **START** icon shows up, click the icon to start update.



STEP 4 **DO NOT** disconnect during the update process.

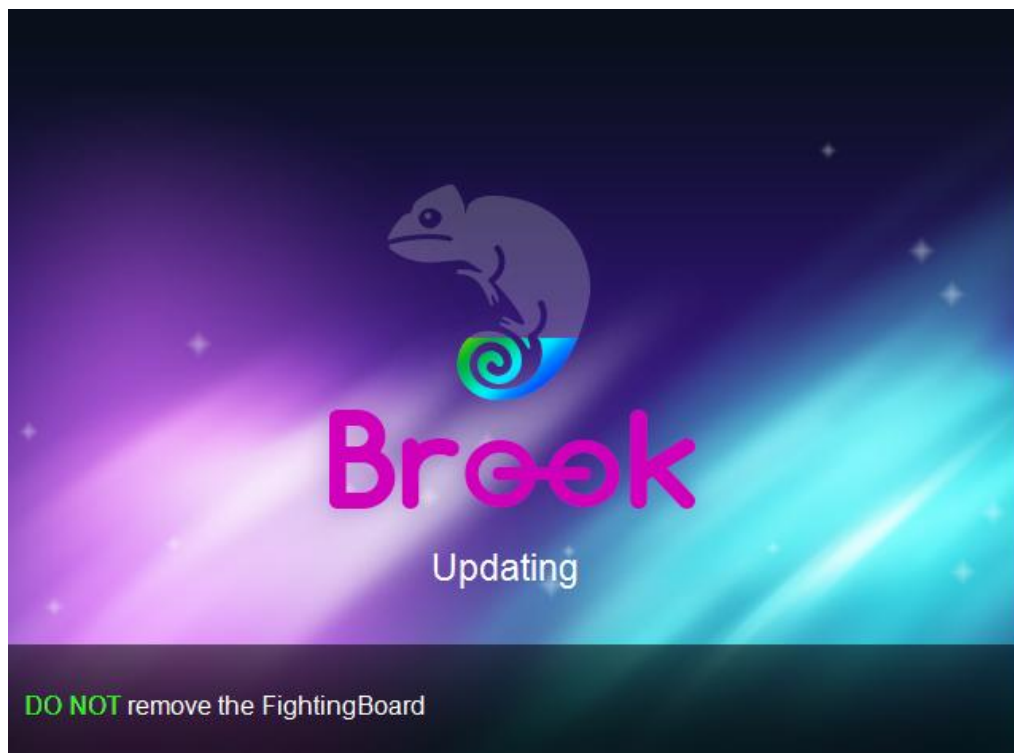

STEP 5 The following screen will be shown once update has successfully finished.

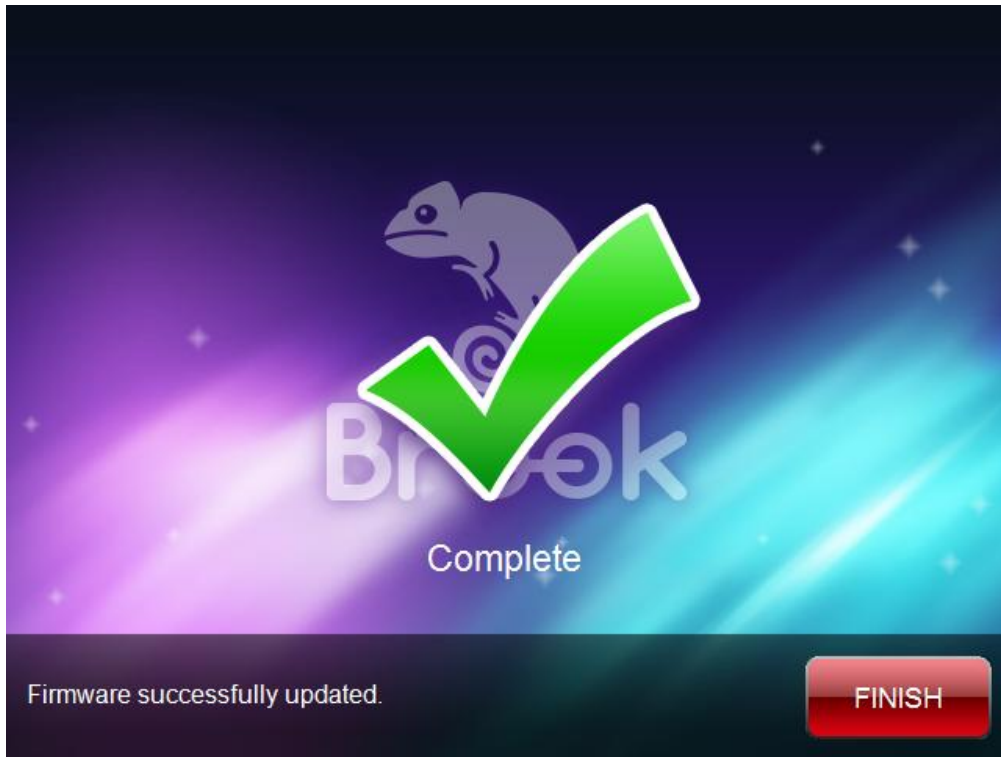

STEP 6 In case the firmware update fails, the following screen will show. Make sure you are using the correct file.

Please try to redo the setup from the beginning. We recommend that you visit our website www.brookaccessory.com and download the update file again before restarting the update.

