Game Controller Super Converters

Magic stick P4-W/H

PS3 ⋙ PS4 Controller Adapter

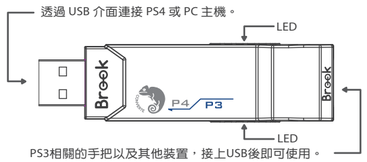

step.1

將Game Controller Super Converters連接到PS4主機的USB連接埠，等待 LED 藍燈亮起即代表與主機連線成功。

step. 2

無線 PS3 手把透過 USB 線與 Game Controller Super Converters 連接後，待手把 Player 指示燈任一燈號亮起(或確認手把能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。

step. 3

拔除無線 PS3 手把 USB 線後，即可進行無線手把操控。

step. 4

註冊完成後，當手把休眠或關閉時，只需按壓手把上的PS按鍵即可立即連線，則不再需要重新使用USB連接線進行註冊。

- 每個 Super Converter 一次僅能對應一支 PS3 手把進行控制。
- 無線 PS3 手把可直接與 Super Converter 連線，若發現無法與 Super Converter 連線時，請重新註冊。

可自動判斷 PS3 手把與方向盤功能，不需要(撥動開關)設定，自動對應 PS4 按鍵功能。按鍵功能定義方式如下：

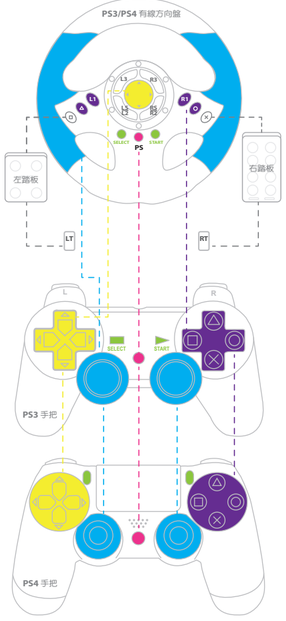

Turbo 使用設定步驟：

step.1

將手把按住 PS 鍵 + SELECT 鍵後，轉接器的LED藍燈轉成LED 紅燈，即進入設定模式。

step. 2

按住 SELECT 鍵不放，再選擇想要連發的鍵，可選擇一個或是多個按鍵。

step. 3

按下 START 鍵後，設置完畢。

step. 4

按下 PS 鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部 Turbo 使用設定步驟：

step.1

將手把按住 PS 鍵 + SELECT 鍵，轉接器的 LED 藍燈轉成 LED 紅燈，進入設定模式。

step. 2

再同時按下 SELECT 鍵 + START 鍵，即可將設定全部清除。

step. 3

按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

更多詳細操作請上官網查詢
www.brookaccessory.com

Remap Key/Custom Buttons 使用設定步驟：

step.1

將手把按住 PS 鍵 +START 鍵後，轉接器的 LED 藍燈轉成 LED 紅燈，即進入設定模式。

step. 2

轉移單一按鍵功能
(舉例：要將○鍵功能轉換到□鍵使用)

1.按下○鍵。

2.按住 SELECT 鍵不放，再按下□鍵。

3.按下START 鍵後，設置完畢。

單一按鍵功能轉移到複數鍵
(舉例：要將○鍵功能轉換到×、△、□三鍵使用)

1.按下○鍵。

2.按住 SELECT 鍵不放，再按下×鍵、△鍵、□鍵。

3.按下START 鍵後，設置完畢。

step. 3

按下PS鍵，轉接器中的LED紅燈，轉換成LED藍燈代表退出設定模式。

清除全部Remap Key/Custom Buttons 使用設定步驟：

step.1

按住 PS 鍵 + START 鍵，轉接器的 LED 藍燈轉成 LED 紅燈，進入設定模式。

step. 2

再同時按下 SELECT 鍵 + START 鍵，即可將設定全部清除。

step. 3

按下 PS 鍵，轉接器中的 LED 紅燈轉換成 LED 藍燈，代表退出設定模式。

更多詳細操作請上官網查詢 **www.brookaccessory.com**

根據國家通訊傳播委員會(NCC)「低功率電波輻射性電機管理辦法」第12條和第14條規定：

經型式認證合格之低功率射頻電機，非經國家通訊傳播委員會（NCC）許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Game Controller Super Converters

Magic stick P4-W/H

PS3 ⋙ PS4 Controller Adapter

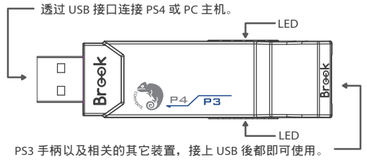

step.1

将 Game Controller Super Converters 连接到 PS4 主机的 USB 连接埠，等待 LED 蓝灯亮起即代表与主机连线成功。

step. 2

无线 PS3 手柄透过 USB 线与 Game Controller Super Converters 连接後，待手柄 Player 指示灯任一灯号亮起(或确认手柄能用有线操控的方式对应主机功能)，即表示与 Game Controller Super Converters 注册完成。

step. 3

拔除 PS3 手柄 USB 线後，即可进行无线手柄操控。

step. 4

注册完成後，当手柄休眠或关闭时，只需按压手柄上的PS按键即可立即连线，则不再需要重新使用USB连接线进行注册。

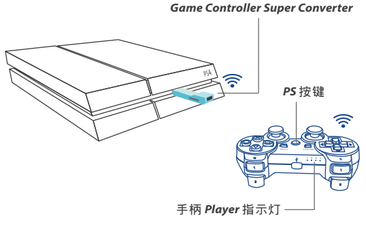

- 每个 Super Converter 一次仅能对应一支 PS3 手柄进行控制。
- 无线 PS3 手柄可直接与 Super Converter 联机，若发现无法与 Super Converter 联机时，请重新注册。

可自动判断 PS3 手柄与方向盘功能，不需要(拨动开关)设定，自动对应 PS4 按键功能。按键功能定义方式如下：

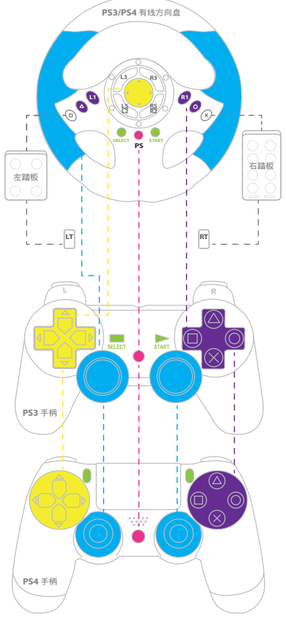

Turbo 使用设定步骤：

step.1

将手把按住 PS 键 + SELECT 键後，转接器的LED蓝灯转成LED 红灯，即进入设定模式。

step. 2

按住 SELECT 键不放，再选择想要连发的键，可选择一个或是多个按键。

step. 3

按下 START 键後，设置完毕。

step. 4

按下 PS 键，转接器中的LED红灯，转换成LED蓝灯代表退出设定模式。

清除全部 Turbo 使用设定步骤：

step.1

将手把按住 PS 键 + SELECT 键，转接器的 LED 蓝灯转成 LED 红灯，进入设定模式。

step. 2

再同时按下 SELECT 键 + START 键，即可将设定清除。

step. 3

按下PS键，转接器中的LED红灯，转换成LED蓝灯代表退出设定模式。

更多详细操作请上官网查询
www.brookaccessory.com

Remap Key/Custom Buttons 使用设定步骤：

step.1

将手把按住 PS 键 +START 键後，转接器的 LED 蓝灯转成 LED 红灯，即进入设定模式。

step. 2

转移单一按键功能
(举例：要将○键功能转换到□键使用)

1.按下○键。

2.按住 SELECT 键不放，再按下□键。

3.按下START 键後，设置完毕。

单一按键功能转移到复数键
(举例：要将○键功能转换到×、△、□三键使用)

1.按下○键。

2.按住 SELECT 键不放，再按下×键、△键、□键。

3.按下START 键後，设置完毕。

step. 3

按下PS键，转接器中的LED红灯，转换成LED蓝灯代表退出设定模式。

清除全部Remap Key/Custom Buttons 使用设定步骤：

step.1

按住 PS 键 + START 键，转接器的 LED 蓝灯转成 LED 红灯，进入设定模式。

step. 2

再同时按下 SELECT 键 + START 键，即可将设定清除。

step. 3

按下 PS 键，转接器中的 LED 红灯转换成 LED 蓝灯，代表退出设定模式。

更多详细操作请上官网查询 **www.brookaccessory.com**

Brook

Game Controller Super Converters

Magic stick P4-W/H

PS3 >><< PS4 Controller Adapter

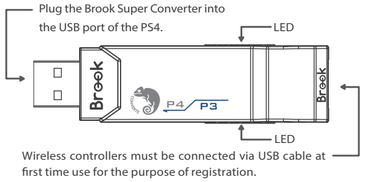

step.1

Connect the Brook Super Converter to the USB port of the PS4 or PC. The converter's blue LED will turn on to indicate a successful connection.

step. 2

For first time use the wireless PS3 controller is connected with a USB cable to the Super Converter. Registration of the controller and mapping of buttons start automatically and finish when the port indicator light of the controller turns on or when pushing a button triggers a response on the screen. The cable is then disconnected and the controller is ready for playing.

step. 3

The USB cable is removed and the controller is ready for use as wireless.

step. 4

Please note that this process only needs to be completed once. After the first-time registration and use, simply press the PS button when the console is hibernating or shut down to have it automatically connect to the Super Converter; there is no need to re-register the controller using the USB cable.

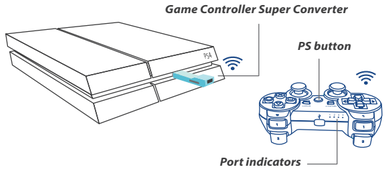

- Each Super Converter can handle one PS3 game controller at a time.
- Wireless PS3 controllers connect to the Super Converter automatically. In case they don't, please try to re-register the controller with the USB cable.

The PS3 to PS4 Super Converter automatically recognizes PS3 gamepads and racing wheels and auto-configures their buttons for use with the PS4. No toggling required. The buttons map as follows.

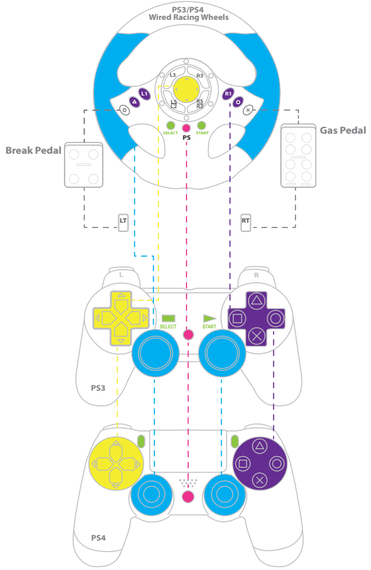

Procedure for assigning a Turbo button

step.1

Press the PS and SELECT buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press the SELECT button and the button you want to assign as the Turbo button at the same time. More than one button can be chosen.

step. 3

Press the START button to complete the setting.

step. 4

Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.

Procedure for clearing a Turbo button assignment

step.1

Press the PS and SELECT buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press the SELECT and START buttons at the same time to clear the current setting.

step. 3

Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.

For more details please visit our official website at
www.brookaccessory.com

Procedure for customizing buttons

step.1

Press the PS and START buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Transfer a function from one button to another.

(Example: You want to use □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold SELECT, then press the □ button.
3. Press START to complete the setting.

Transfer a function from one button to multiple buttons.

(Example: You want to use ×, △ or □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold SELECT, then press ×, △ and □ one by one (any sequence will do).
3. Press START to complete the setting.

step. 3

Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.

Procedure for resetting all customized buttons

step.1

Press the PS and START buttons at the same time to enter the settings mode. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press the SELECT and START buttons at the same time to clear the custom buttons.

step. 3

Press the PS button to exit the settings mode. The converter's LED will switch back from red to blue.

For more details please visit our official website at
www.brookaccessory.com

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.