Game Controller Super Converters

Switch PRO
PS3,PS4,PS5
⟷
PS Classic
PS2
PC(X-Input)

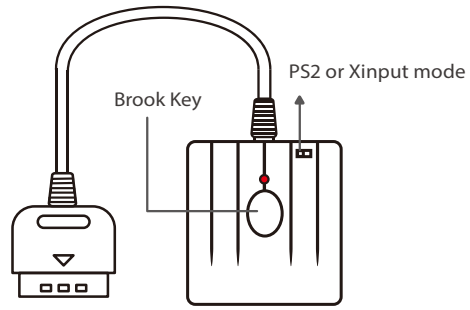

Wireless controllers must be connected via USB cable at first time use for the purpose of registration.

The firmware update of the Xbox Bluetooth controller(firmware version 5.11.3118.0) changes the Bluetooth to BLE, which leads to the result that some of Brook products no longer support the wireless use of the Xbox Bluetooth controllers.

step.1

Connect the converter to PS2, or connect the converter to PS Classic via Black USB of the splitter cable.

step. 2

Connect the PS3/PS4 game controller to the converter via a standard USB cable. The registration of the controller starts automatically.

step.3

If the controller does not work correctly due to insufficient power, please connect the micro USB port to the 5V/1A Charger by gray USB of the splitter cable.

step.4

The USB cable is removed and the controller is ready for wireless use.

*Please note that this process only needs to be completed once.

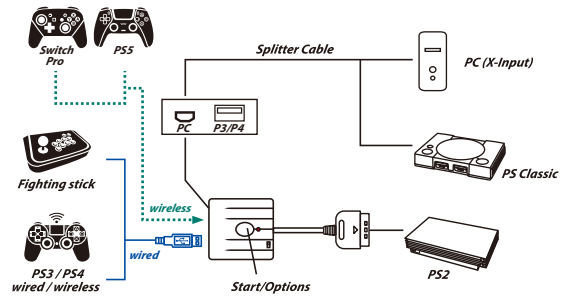

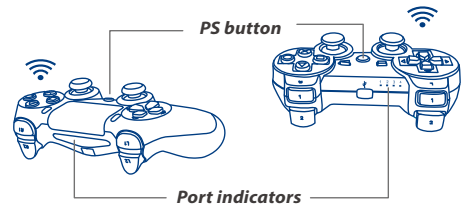

- Each converter is for one PS3/PS4 game controller at a time.
- Wireless PS3/PS4 controllers connect to the converter automatically. In case they don't, please try to re-register the controller with USB cable.
- When connected to a PC, press and hold down the **Brook Key** until it flashes 5 times to switch to X-Input mode.

PS Classic	PS2/ PS	PC (X-Input)	PS4	PS3
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
×	×	×	×	×
○	○	○	○	○
□	□	□	□	□
△	△	△	△	△
Start	Start	Start	OPTIONS	Start
Select	Select	Select	SHARE	Select
Lx	Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx	Rx
L1	L1	L1	L1	L1
R1	R1	R1	R1	R1
L2	L2	L2	L2	L2
R2	R2	R2	R2	R2
-	L3	L3	L3	L3
-	R3	R3	R3	R3
-	ANALOG	XBOX	PS Key	PS Key

Procedure for assigning a Turbo button

step.1

Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time.

step. 2

Press the SELECT button (Press the SHARE button for PS4 Gamepad) and the button you want to assign as the Turbo button at the same time. More than one button can be chosen.

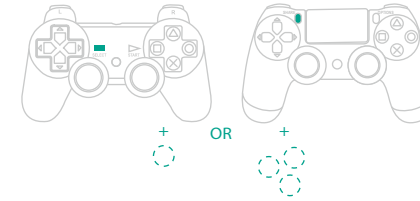

step. 3

Press the START button(Press the OPTIONS button for PS4 Gamepad) to complete the setting.

step. 4

Press the PS button to exit the setting mode.

Procedure for clearing a Turbo button assignment

step.1

Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time.

step. 2

Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the current setting.

step. 3

Press the PS button to exit the settings mode.

Procedure for customizing buttons

step.1

Press the PS and START (Press the PS and OPTIONS buttons for PS4 Gamepad) buttons at the same time.

step. 2

Transfer a function from one button to another.

(Example: You want to use □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press the □ button.
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.

Transfer a function from one button to multiple buttons.

(Example: You want to use ×, △ or □ to do what ○ does now.)

1. Press the ○ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press ×, △ and □ button one by one.(any sequence will do.)
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.

step. 3

Press the PS button to exit the setting mode.

Procedure for resetting all customized buttons

step.1

Press the PS and START buttons (Press the PS and OPTIONS buttons for PS4 Gamepad) at the same time.

step. 2

Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the customized setting.

step. 3

Press the PS button to exit the setting mode.

R 005-102101

P3/P4 to PSClas/P2 Controller Adapter
P/N: ZPP4000

For more details please visit our official website at
www.brookaccessory.com

Brook Gaming

202202V3

Game Controller Super Converters

Switch PRO
PS3,PS4,PS5

PS Classic
PS2
PC(X-Input)

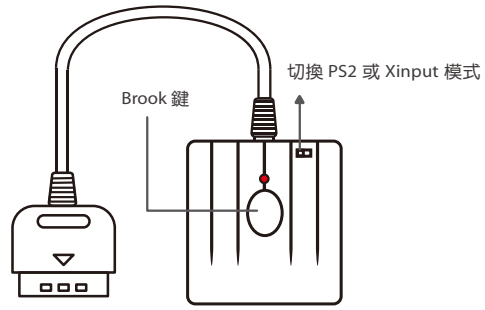

第一次使用無線手把前，需要透過 USB 連接的方式將其註冊

Xbox 藍牙手把因將藍牙改為 BLE 並進行韌體更新（版本 5.11.3118.0）導致 Brook 部份產品無法支援無線 Xbox 藍牙手把。

step.1
將 converter 連接到 PS2, 或者藉由附帶的 USB 線黑色接頭將 coverter 連接到 PS Classic。

step. 2
將 PS3/PS4 手把接上 converter，手把將自動與 converter 註冊。

step.3
如果由於電量不足導致本產品無法正常工作，請將附帶的 USB 線灰色接頭連接到可以供電的 USB 設備，例如 USB AC 充電器。

step.4
將手把 USB 線移除，按下 PS_Key 喚醒手把，即可使用無線功能。
* 請注意，這個註冊流程只需在第一次使用時操作。

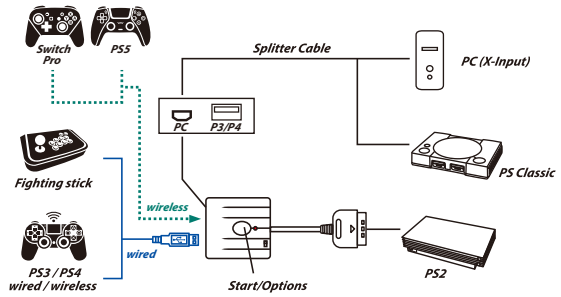

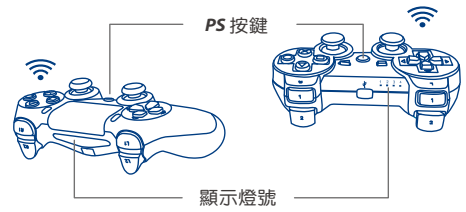

- 請注意每個 converter 一次僅能對應一支 PS3/PS4 手把進行控制。
- 無線 PS3/PS4 手把將會自動連接 converter，如果沒有自動連接，請透過 USB 線將其重新註冊。
- 當連接到 PC 時、按住 **Brook 鍵** 直到閃爍五次即可切換為 X-Input 模式。

按鍵對應表

PS Classic	PS2/ PS	PC (X-Input)	PS4	PS3
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
×	×	×	×	×
○	○	○	○	○
□	□	□	□	□
△	△	△	△	△
Start	Start	Start	OPTIONS	Start
Select	Select	Select	SHARE	Select
Lx	Lx	Lx	Lx	Lx
Ly	Ly	Ly	Ly	Ly
Ry	Ry	Ry	Ry	Ry
Rx	Rx	Rx	Rx	Rx
L1	L1	L1	L1	L1
R1	R1	R1	R1	R1
L2	L2	L2	L2	L2
R2	R2	R2	R2	R2
-	L3	L3	L3	L3
-	R3	R3	R3	R3
-	ANALOG	XBOX	PS Key	PS Key

Turbo 功能設定步驟

step.1
同時按住 PS 和 SELECT 鍵 (PS4 手把請按 PS 和 SHARE 鍵)。

step. 2
按下 SELECT 鍵不放 (PS4 手把請按 SHARE 鍵)，再選擇要設置連發的按鍵，可選擇一個或是多個按鍵。

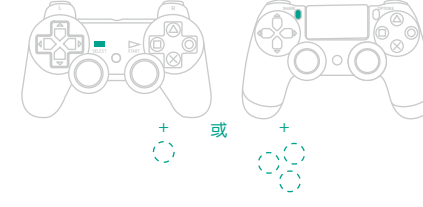

step. 3
按下 START 鍵後 (PS4 手把請按 OPTIONS 鍵)，設定完畢。

step. 4
按下 PS 鍵離開設定模式。

清除全部 Turbo 功能設定步驟

step.1
同時按住 PS 和 SELECT 鍵 (PS4 手把請按 PS 和 SHARE 鍵)。

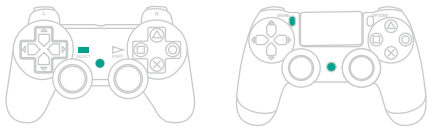

step. 2
同時按住 SELECT 和 START 鍵 (PS4 手把請按 SHARE 和 OPTIONS 鍵) 即可將設定全部清除。

step. 3
按下 PS 鍵退出 Turbo 設定模式。

Custom Buttons 功能設定步驟

step.1
同時按住 PS 和 START 鍵 (PS4 手把請按 PS 和 OPTIONS 鍵)。

step. 2

將一個按鍵編輯成另一個按鍵的功能時

(舉例 : 你要將 ○ 變成 □ 的功能)

1. 按下 ○ 鍵。
2. 按住 SELECT 鍵不放 (PS4 手把請按住 SHARE 不放)，再按下 □ 鍵。
3. 按下 START 鍵 (PS4 手把請按 OPTIONS 鍵) 即設定完畢。

將一個按鍵編輯成多個按鍵的功能時

(舉例 : 你要將 ○ 變成 ╳、△ 和 □ 的功能)

1. 按下 ○ 鍵。
2. 按住 SELECT 鍵不放 (PS4 手把請按住 SHARE 不放)，再按下 ╳, △ 及 □鍵。(任意順序皆可)
3. 按下 START 鍵 (PS4 手把請按 OPTIONS 鍵) 即設定完畢。

step. 3
按下 PS 鍵退出設定模式。

清除全部 Custom Buttons 功能設定步驟

step.1
同時按住 PS 和 START 鍵 (PS4 手把請按 PS 和 OPTIONS 鍵)。

step. 2
同時按住 SELECT 和 START 鍵 (PS4 手把請按 SHARE 和 OPTIONS 鍵) 即可將設定全部清除。

step. 3
按下 PS 鍵退出設定模式。

R 005-102101
P3/P4 to PSClas/P2 Controller Adapter
P/N: ZPP4000

更多詳細操作請上官網查詢 www.brookaccessory.com

Brook Gaming

202202V3