Game Controller Super Converters

Magic stick X1-BK

Xbox 360/Xbox One ⟷ Xbox One Controller Adapter

step.1
將Game Controller Super Converters連接到 Xbox One 主機的USB連接埠。

step. 2
Xbox 360 手把透過USB線與 Game Controller Super Converters 連接後，待手把Player指示燈任一燈號亮起(或確認手把能用有線操控的方式對應主機功能)，即表示與 Game Controller Super Converters 註冊完成。

Game Controller Super Converter

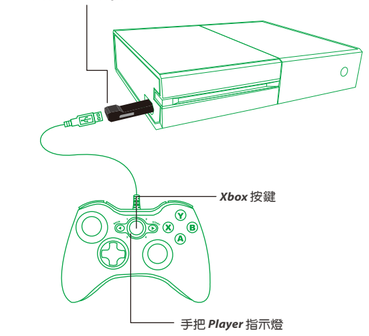

- 每個 Super Converter 一次僅能對應一支 Xbox 360 手把進行控制。
- Win7 以上系統請安裝微軟 Xbox One 驅動程式即可使用，Win7 以下系統不支援。

可自動判斷 Xbox 360 手把與方向盤功能，不需要(撥動開關)設定，自動對應 Xbox One 按鍵功能。
按鍵功能定義方式如下：

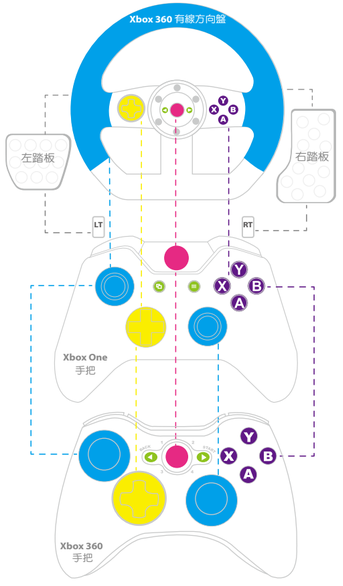

Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK 鍵進入設定模式。

step. 2
按住 BACK 鍵不放，再選擇想要連發的按鍵，可選擇一個或是多個按鍵。

step. 3
按下 START 鍵後，設置完畢。

step. 4
按下 Xbox 鍵，退出模式。

清除全部 Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK 鍵進入設定模式。

step. 2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。

step. 3
按下 Xbox 鍵，退出模式。

更多詳細操作請上官網查詢
www.brookaccessory.com

Remap Key/Custom Buttons 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + START 鍵進入設定模式。

step. 2
轉移單一按鍵功能
(舉例：要將B鍵功能轉換到X鍵使用)

1.按下 B 鍵。

2.按住 BACK 鍵不放，再按下 X鍵。

3.按下START鍵後，設置完畢。

單一按鍵功能轉移到複數鍵
(舉例：要將B鍵功能轉換到 Y、X、A三鍵使用)

1.按下 B 鍵。

2.按住 BACK 鍵不放，再按下Y鍵、X鍵、A鍵。

3.按下START鍵後，設置完畢。

step. 3
按下 Xbox 鍵，退出模式。

清除全部Remap Key/Custom Buttons 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + START 鍵進入設定模式。

step. 2
再同時按下 BACK 鍵 + START 鍵，即可將設定全部清除。

step. 3
按下 Xbox 鍵，退出模式。

更多詳細操作請上官網查詢 **www.brookaccessory.com**
202007V2

Game Controller Super Converters

Magic stick X1-BK

Xbox 360/Xbox One ⟷ Xbox One Controller Adapter

step.1
将Game Controller Super Converters连接到 Xbox One 主机的USB连接埠。

step. 2
Xbox 360 手柄透过USB线与 Game Controller Super Converters 连接後，待手柄Player指示灯任一灯号亮起(或确认手柄能用有线操控的方式对应主机功能)，即表示与 Game Controller Super Converters 注册完成。

Game Controller Super Converter

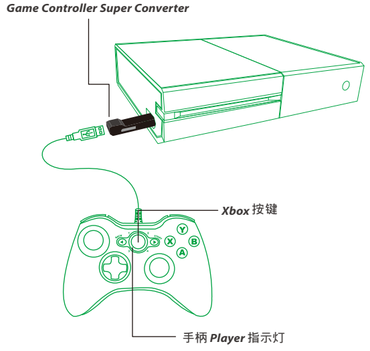

- 每个 Super Converter 一次仅能对应一支 Xbox 360 手柄进行控制。
- Win7 以上系统请安装微软 Xbox One 驱动程式即可使用，Win7 以下系统不支持。

可自动判断 Xbox 360 手柄与方向盘功能，不需要(拨动开关)设定，自动对应 Xbox One 按键功能。
按键功能定义方式如下：

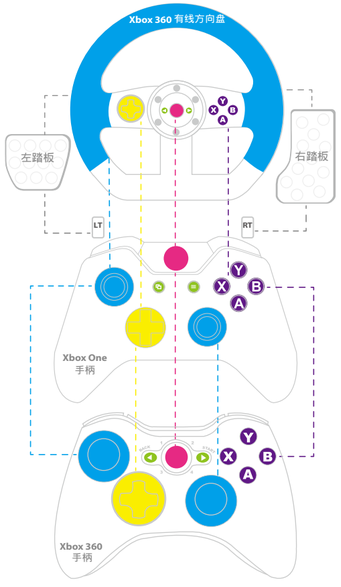

Turbo 使用设定步骤：

step.1
将手柄按住 Xbox 键 + BACK 键进入设定模式。

step. 2
按住 BACK 键不放，再选择想要连发的按键，可选择一个或是多个按键。

step. 3
按下 START 键後，设置完毕。

step. 4
按下 Xbox 键，退出模式。

清除全部 Turbo 使用設定步骤：

step.1
将手柄按住 Xbox 键 + BACK 键进入设定模式。

step. 2
再同时按下 BACK 键 + START 键，即可将设定全部清除。

step. 3
按下 Xbox 键，退出模式。

更多详细操作请上官网查询
www.brookaccessory.com

Remap Key/Custom Buttons 使用设定步骤：

step.1
将手柄按住 Xbox 键 + START 键进入设定模式。

step. 2
转移单一按键功能
(举例：要将B键功能转换到X键使用)

1.按下 B 键。

2.按住 BACK 键不放，再按下 X键。

3.按下START鍵後，設置完畢。

单一按键功能转移到复数键
(举例：要将B键功能转换到 Y、X、A三键使用)

1.按下 B 键。

2.按住 BACK 键不放，再按下Y键、X键、A键。

3.按下START鍵後，设置完毕。

step. 3
按下 Xbox 键，退出模式。

清除全部Remap Key/Custom Buttons 使用设定步骤：

step.1
将手柄按住 Xbox 键 + START 键进入设定模式。

step. 2
再同时按下 BACK 键 + START 键，即可将设定全部清除。

step. 3
按下 Xbox 键，退出模式。

更多详细操作请上官网查询 **www.brookaccessory.com**
202007V2

Brook

Game Controller Super Converters

Magic stick X1-BK

Xbox 360/Xbox One >><< Xbox One Controller Adapter

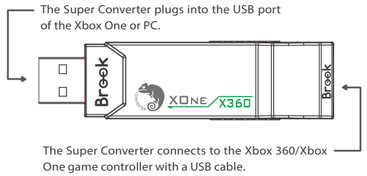

step.1
Connect the Super Converter to the USB port of the Xbox One.

step. 2
Connect the Xbox 360 game controller to the Super Converter via a standard USB cable. The registration of the controller starts automatically and finishes when the port indicator light on the controller turns on or when pushing a button triggers a response on the screen.

Game Controller Super Converter

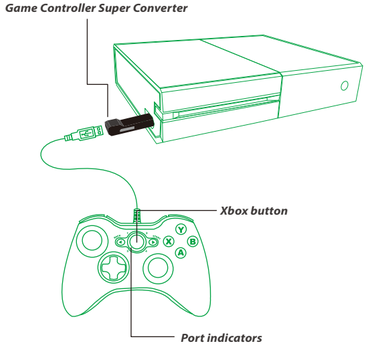

- Each Super Converter can handle one Xbox 360 game controller at a time.
- To use the Super Converter with a PC running on Windows 7 please install the original Xbox One driver from Microsoft. Older operating systems are not supported.

The Super Converter automatically recognizes Xbox 360 gamepads and racing wheels and auto-configures their buttons for use with the Xbox One.

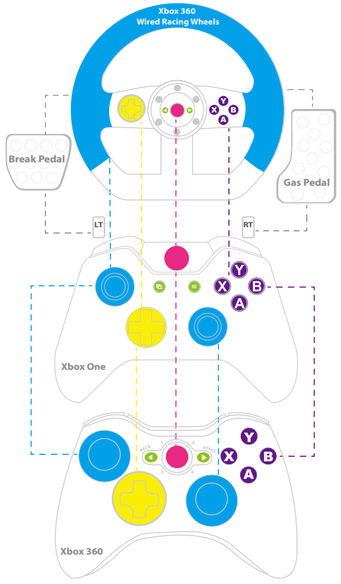

Procedure for assigning a Turbo button

step.1
Press the Xbox GUIDE and the BACK buttons at the same time to enter the settings mode.

step. 2
Press the BACK button to select which button you want to use for the turbo function. A single button or a combination of buttons can be chosen.

step. 3
Press the START button to complete the setting.

step. 4
Press the Xbox GUIDE button to exit the settings mode.

Procedure for clearing a Turbo button assignment

step.1
Press the Xbox GUIDE and BACK buttons at the same time to enter the settings mode.

step. 2
Press the BACK and START buttons at the same time to clear the current setting.

step. 3
Press the Xbox GUIDE button to exit the settings mode.

Procedure for customizing buttons

step.1
Press the Xbox GUIDE and START buttons at the same time to enter the settings mode.

step. 2

Transfer a function from one button to another.

(Example: You want to use X to do what B does now.)

1. Press the B button.
2. Press and hold BACK, then press the X button.
3. Press START to complete the setting.

Transfer a function from one button to multiple buttons.

(Example: You want to use A, Y or X to do what B does now.)

1. Press the B button.
2. Press and hold BACK, then press A, Y and X one by one (any sequence will do).
3. Press START to complete the setting.

step. 3
Press the Xbox GUIDE button to exit the settings mode.

Procedure for resetting all customizing buttons

step.1
Press the Xbox GUIDE and START buttons at the same time to enter the settings mode.

step. 2
Press the BACK and START buttons at the same time clear all settings.

step. 3
Press the Xbox GUIDE button to exit the settings mode.

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For more details please visit our official website at
www.brookaccessory.com
202007V2

Brook

Game Controller Super Converters

Magic stick X1-BK

Xbox 360/Xbox One >><< Xbox One Controller Adapter

step.1
ゲームコントローラスーパーコンバーター(以下本製品)をXbox One本体のUSBポートに接続します。

step. 2
Xbox 360コントローラのUSBケーブルを本製品に接続し、コントローラのリングライトが点灯するまで待機してください。(またはケーブルで接続された状態のコントローラを使用し、ゲーム機本体の反応があるかどうか確認してください。)リングライトまたは動作が確認できれば接続は完了です。

ゲームコントローラスーパーコンバーター

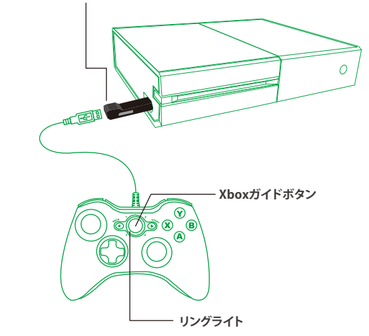

- 本製品ひとつにつき、一度にひとつのXbox 360コントローラしか接続できません。
- Win7以降のシステムにはMicrosoft Xbox Oneドライバーをインストールしてください。Win7以前のシステムはサポート対象外です。

Xbox 360コントローラやレーシングホイールの機能を自動認識します。オンオフの切り替え設定などは不要で、Xbox Oneのボタン機能に自動的に対応します。

主なボタンは次のように定義されています：

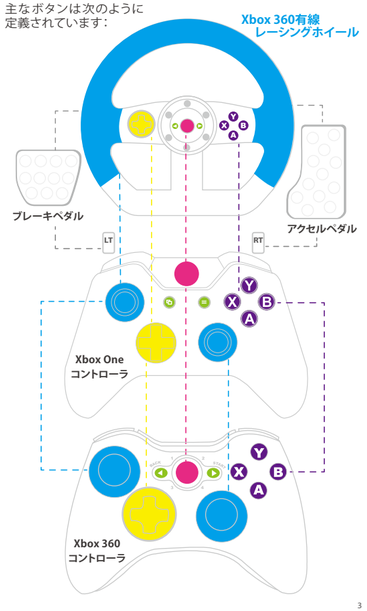

連射機能の設定手順

step.1
コントローラのXboxガイドボタンとBACKボタンを長押しすると、連射設定モードに入ります。

step. 2
BACKボタンを長押ししたまま、連射機能を設定させたいボタンを選択します。ボタンは複数選択することもできます。

step. 3
STARTボタンを押すと設定完了です。

step. 4
Xboxガイドボタンを押して設定モードを終了させます。

連射設定の解除手順

step.1
コントローラのXboxガイドボタンとBACKボタンを長押しすると、連射設定モードに入ります。

step. 2
BACKボタンとSTARTボタンを同時に押して、すべての設定を解除します。

step. 3
Xboxガイドボタンを押して設定モードを終了させます。

ボタン割り当てとカスタムモードの設定手順

step.1
コントローラのXboxガイドボタンとSTARTボタンを長押しすると、カスタム設定モードに入ります。

step. 2
ひとつのボタンにひとつの機能を割り当てます(例：Bボタンの機能をXボタンに割り当てる)

1. Bボタンを押します。

2. BACKボタンを長押ししたまま、Xボタンを押します。

3. STARTボタンを押すと設定完了です。

ひとつのボタンに複数の機能を割り当てます(例：Bボタンの機能をY、X、Aボタンに割り当てる)

1. Bボタンを押します。

2. BACKボタンを長押ししたまま、Y、X、Aボタンを押します。

3. STARTボタンを押すと設定完了です。

step. 3
Xboxガイドボタンを押して設定モードを終了させます。

ボタン割り当てとカスタムモードの解除手順

step.1
コントローラのXboxガイドボタンとSTARTボタンを長押しすると、カスタム設定モードに入ります。

step. 2
BACKボタンとSTARTボタンを同時に押して、すべての設定を解除します。

step. 3
Xboxガイドボタンを押して設定モードを終了させます。

詳しい操作方法は公式サイトをご確認ください
www.brookaccessory.com
202007V2