Brook

Game Controller Super Converters

Magic stick P4-GR

Xbox 360/Xbox One PS4 Controller Adapter

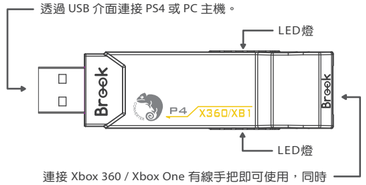

step.1
將Game Controller Super Converters連接到 PS4 主機的USB連接埠。等待 LED 藍燈亮起即代表與主機連線成功。

step. 2
Xbox 360 / Xbox One 手把透過USB線與 Game Controller Super Converters 連接後，待手把Player指示燈任一燈號亮起（或確認手把能用有線操控的方式對應主機功能），即表示與 Game Controller Super Converters 註冊完成。

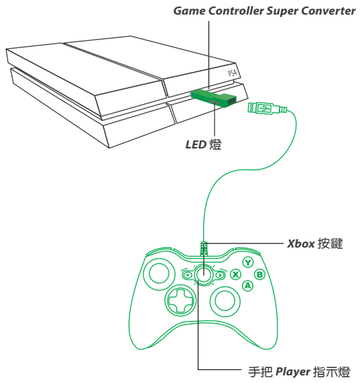

· 每個 Super Converter 一次僅能對應一支 Xbox 360 / Xbox One 手把進行控制。

可自動判斷 Xbox 360 / Xbox One 手把與方向盤功能，不需要（撥動開關）設定，自動對應 PS4 按鍵功能。

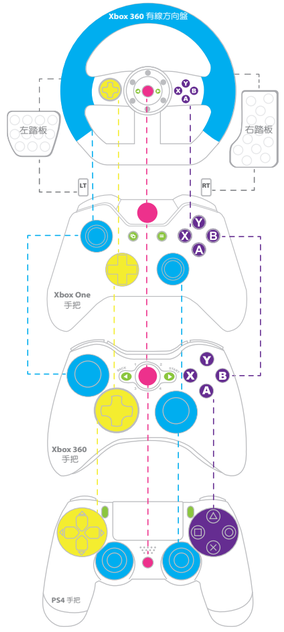

Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK / View 鍵，轉接器的LED 藍燈轉成 LED 紅燈進入設定模式。

step. 2
按住 BACK / View 鍵不放，再選擇想要連發的按鍵，可選擇一個或是多個按鍵。

step. 3
按下 START / Menu 鍵後，設置完畢。

step. 4
按下 Xbox 鍵，轉接器中的LED 紅燈轉換成LED 藍燈代表退出設定模式。

清除全部 Turbo 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + BACK / View 鍵，轉接器的 LED 藍燈轉成 LED 紅燈，進入設定模式。

step. 2
再同時按下 BACK / View 鍵 + START / Menu 鍵，即可將設定全部清除。

step. 3
按下 Xbox 鍵，轉接器中的LED 紅燈轉換成LED 藍燈，代表退出設定模式。

更多詳細操作請上官網查詢
www.brookaccessory.com

Remap Key/Custom Buttons 使用設定步驟：

step.1
將手把按住 Xbox 鍵 + START / Menu 鍵，轉接器的 LED 藍燈轉成 LED 紅燈，即進入設定模式。

step. 2
轉移單一按鍵功能
（比如將B鍵變成A鍵使用）

1.按下B鍵。

2.按住 BACK / View 鍵不放，再按下A鍵。

3.按下 START / Menu 鍵後，設置完畢。

單一按鍵功能轉移到複數鍵使用
（比如將B按鍵變成X+B+A三鍵使用）

1.按下B鍵。

2.按住 BACK / View 鍵不放，再按下X鍵、B鍵、A鍵。

3.按下 START / Menu 鍵後，設置完畢。

step. 3
按下 Xbox 鍵，轉接器中的LED 紅燈轉換成LED 藍燈，代表退出設定模式。

清除全部Remap Key/Custom Buttons 使用設定步驟：

step.1
將 手把按住 Xbox 鍵 + START / Menu 鍵，轉接器的 LED 藍燈轉成 LED 紅燈，進入設定模式。

step. 2
再同時按下 BACK / View 鍵 + START / Menu 鍵，即可將設定全部清除。

step. 3
按下 Xbox 鍵，轉接器中的 LED 紅燈轉換成 LED 藍燈，代表退出設定模式。

更多詳細操作請上官網查詢 **www.brookaccessory.com**

Brook

Game Controller Super Converters

Magic stick P4-GR

Xbox 360/Xbox One PS4 Controller Adapter

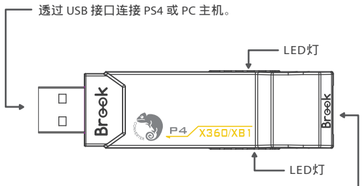

step.1
将Game Controller Super Converters连接到 PS4 主机的USB连接埠，等待 LED 蓝灯亮起即代表与主机连线成功。

step. 2
Xbox 360 / Xbox One 手柄透过USB线与 Game Controller Super Converters 连接後，待手柄Player指示灯任一灯号亮起（或确认手柄能用有线操控的方式对应主机功能），即表示与 Game Controller Super Converters 注册完成。

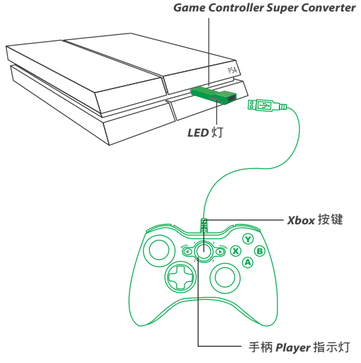

· 每个 Super Converter 一次仅能对应一支 Xbox 360 / Xbox One 手柄进行控制。

可自动判断 Xbox 360 / Xbox One 手柄与方向盘功能，不需要（拨动开关）设定，自动对应 PS4 按键功能。

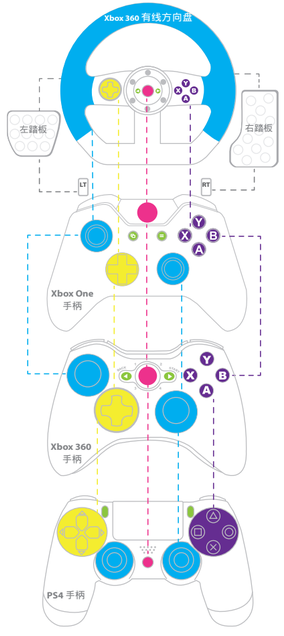

Turbo 使用设定步骤：

step.1
将手柄按住 Xbox 键 + BACK / View 键，转接器的LED 蓝灯转成 LED 红灯，即进入设定模式

step. 2
按住 BACK / View 键不放，再选择想要连发的按键，可选择一个或是多个按键。

step. 3
按下 START / Menu 键後，设置完毕。

step. 4
按下 Xbox 键，转接器中的LED 红灯转换成LED 蓝灯，代表退出设定模式。

清除全部 Turbo 使用设定步骤：

step.1
将手柄按住 Xbox 键 + BACK / View 键，转接器的 LED 蓝灯转成 LED 红灯，进入设定模式。

step. 2
再同时按下 BACK / View 键 + START / Menu 键，即可将设定全部清除。

step. 3
按下 Xbox 键，转接器中的 LED 红灯转换成LED 蓝灯，代表退出设定模式。

更多详细操作请上官网查询
www.brookaccessory.com

Remap Key/Custom Buttons 使用设定步骤：

step.1
将手柄按住 Xbox 键 + START / Menu 键，转接器的 LED 蓝灯转成 LED 红灯，即进入设定模式。

step. 2
转移单一按键功能
（比如将B键变成A键使用）

1.按下B键。

2.按住 BACK / View 键不放，再按下A键。

3.按下START / Menu键後，设置完毕。

单一按键功能转移到复数键使用
（比如将B按键变成X+B+A三键使用）

1.按下B键。

2.按住 BACK / View 键不放，再按下X键、B键、A键。

3.按下START / Menu键後，设置完毕。

step. 5
按下 Xbox 键，转接器中的LED 红灯转换成LED 蓝灯，代表退出设定模式。

清除全部Remap Key/Custom Buttons 使用设定步骤：

step.1
将手柄按住 Xbox 键 + START / Menu 键，转接器的 LED 蓝灯转成 LED 红灯，进入设定模式。

step. 2
再同时按下 BACK / View 键 + START / Menu键，即可将设定全部清除。

step. 3
按下 Xbox 键，转接器中的 LED 红灯转换成 LED 蓝灯，代表退出设定模式。

更多详细操作请上官网查询 **www.brookaccessory.com**

Brook

Game Controller Super Converters

Magic stick P4-GR

Xbox 360/ Xbox One PS4 Controller Adapter

The Super Converter plugs into the USB port of the PS4 or PC.

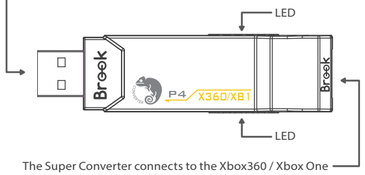

The Super Converter connects to the Xbox360 / Xbox One game controller with a USB cable.

step.1

Connect the Super Converter to the USB port of the PS4.
The converter's blue LED will turn on to indicate a successful connection.

step. 2

Connect the Xbox 360 / Xbox One game controller to the Super Converter via a standard USB cable. The registration of the controller starts automatically and finishes when the port indicator light on the controller turns on or when pushing a button triggers a response on the screen.

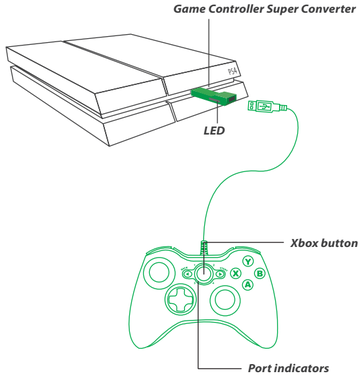

· Each Super Converter can handle one Xbox 360 / Xbox One game controller at a time.

The Super Converter automatically recognizes Xbox 360 / Xbox One gamepads and racing wheels and auto-configures their buttons for use with the PS4.

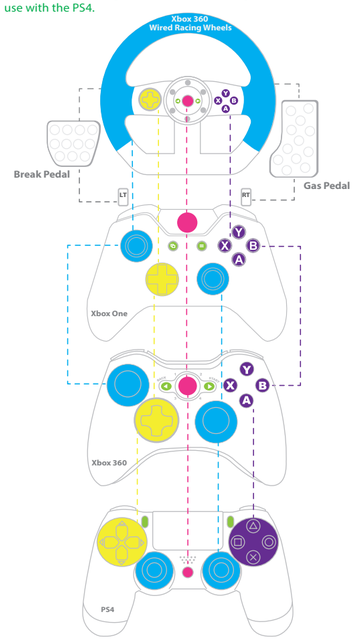

Procedure for assigning a Turbo button

step.1

Press the Xbox GUIDE and BACK/View buttons at the same time.
The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press and hold the BACK/View button and select which button you want to use for the turbo function. A single button or a combination of buttons can be chosen.

step. 3

Press the START/Menu button to complete the setting.

step. 4

Press the Xbox GUIDE button to exit the settings mode.
The converter's LED will switch back from red to blue.

Procedure for clearing a Turbo button assignment

step.1

Press the Xbox GUIDE and BACK/View buttons at the same time .
The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press the BACK/View and START/Menu buttons at the same time to clear the current setting.

step. 3

Press the Xbox GUIDE button to exit the settings mode.
The converter's LED will switch back from red to blue.

For more details please visit our official website at
www.brookaccessory.com

Procedure for customizing buttons

step.1

Press the Xbox GUIDE and START/Menu buttons at the same time. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Transfer a function from one button to another.

(Example: You want to use A to do what B does now.)

1.Press the B button.

2.Press and hold BACK/View, then press the A button.

3.Press START/Menu to complete the setting.

Transfer a function from one button to multiple buttons.

(Example: You want to use X, B or A to do what B does now.)

1.Press the B button.

2.Press and hold BACK/View, then press X, B and A one by one (any sequence will do).

3.Press START/Menu to complete the setting.

step. 3

Press the Xbox GUIDE button to exit the settings mode. The converter's LED will switch back from red to blue.

Procedure for resetting all customizing buttons

step.1

Press the Xbox GUIDE and START/Menu buttons at the same time to enter the settings mode. The converter's LED will switch from blue to red to indicate that you enter the settings mode.

step. 2

Press the BACK/View and START/Menu buttons at the same time to clear all settings.

step. 3

Press the Xbox GUIDE button to exit the settings mode.
The converter's LED will switch back from red to blue.

For more details please visit our official website at
www.brookaccessory.com

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

· Reorient or relocate the receiving antenna.
· Increase the separation between the equipment and receiver.
· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
· Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.