Game Controller Super Converters

Magic Box DC-GRY

PS3/PS4 ⟶ Dreamcast Controller Adapter

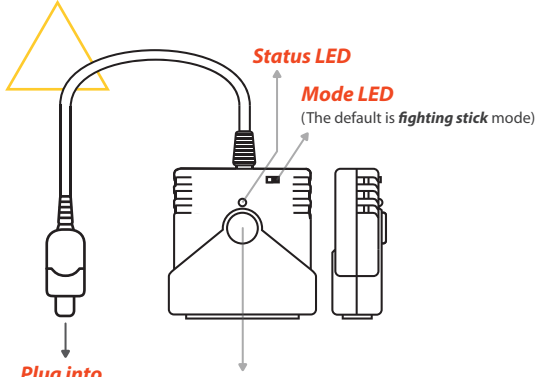

- Green Light: ***Controller*** Mode
- Red Light: ***Fighting Stick*** Mode (default)

step.1

Connect the converter to Dreamcast.

step.2

Connect the PS3/PS4 game controller to the Super Converter via standard USB cable. The registration of the controller starts automatically. When the controller LED turns on, the registration is finished.

step.3

After removing USB cable, the controller is ready for use wirelessly.

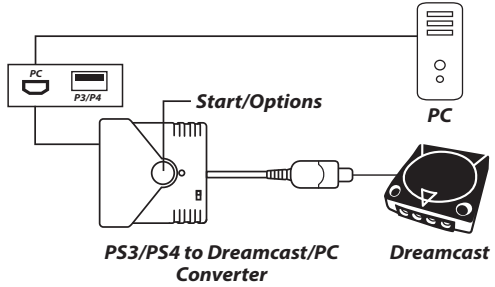

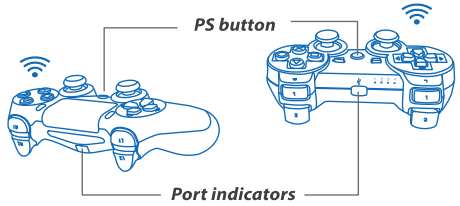

- Each Super Converter can handle one PS3/PS4 game controller at a time.
- Wireless PS3/PS4 controllers connect to the Super Converter automatically. In case they don't, please try to re-register the controller with the USB cable.

Dreamcast Controller	Dreamcast Fighting Stick	PC (X-Input)	PS4 Gamepad	PS3 Gamepad
DPad-UP	DPad-UP	DPad-UP	DPad-UP	DPad-UP
Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down	Dpad-Down
DPad-Left	DPad-Left	DPad-Left	DPad-Left	DPad-Left
Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right	Dpad-Right
A	A	A	×	×
B	B	B	○	○
X	X	X	□	□
Y	Y	Y	△	△
START	START	START	OPTIONS	START
		XBOX	PS Key	PS Key
		BACK	SHARE	SELECT
Lx	DPad	Lx	Lx	Lx
Ly		Ly	Ly	Ly
		Ry	Ry	Ry
		Rx	Rx	Rx
	Z	L1	L1	L1
	Z	R1	R1	R1
L	C	L2	L2	L2
R	C	R2	R2	R2
		L3	L3	L3
		R3	R3	R3
			TOUCH	

Note: Use L-STICK to set up the functions of D-PAD

Procedure for assigning a Turbo button

step.1

Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time. The Status LED of Converter will **turn off** to indicate that it has entered setting mode.

step.2

Press the SELECT button (Press the SHARE button for PS4 Gamepad) and the button you want to assign to turbo at the same time. More than one button can be chosen.

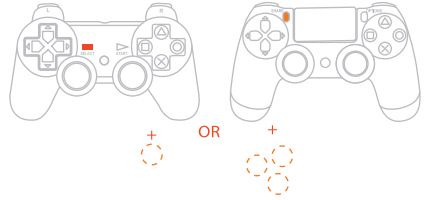

step.3

Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.

step.4

Press the PS button to exit the setting mode. The Status LED of Converter will **turn on** to indicate that it has exited the setting mode.

Press D-PAD UP + START to save Turbo or Remap setting (only one setting).

Procedure for cleaning a Turbo button assignment

step.1

Press the PS and SELECT buttons (Press the PS and SHARE buttons for PS4 Gamepad) at the same time. The Status LED of Converter will **turn off** to indicate that it has entered setting mode.

step.2

Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the current setting.

step.3

Press the PS button to exit the setting mode. The Status LED of Converter will **turn on** to indicate that it has exited the setting mode.

For more Details please visit our official website at
www.brookaccessory.com

Procedure for customizing buttons

step.1

Press the PS and START (Press the PS and OPTIONS buttons for PS4 Gamepad) buttons at the same time. The Status LED of Converter will **turn off** to indicate that it has entered setting mode.

step.2

Transfer a function from one button to another.

(Example: You want to use □ to do what ○ does now.)

1. Press the □ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press the ○ button.
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.

Transfer a function from one button to multiple buttons.

(Example: You want to use ✕, to do what ○+△ do now.)

1. Press the ✕ button.
2. Press and hold the SELECT button (Press and hold the SHARE button for PS4 Gamepad), then press ○ and △ button one by one. (any sequence will do.)
3. Press the START button (Press the OPTIONS button for PS4 Gamepad) to complete the setting.

step.3

Press the PS button to exit the setting mode. Status LED of Converter will **turn on** to indicate that it has exited the setting mode.

Press D-PAD UP + START to save Turbo or Remap setting (only one setting).

Procedure for resetting all customized buttons

step.1

Press the PS and START buttons (Press the PS and OPTIONS buttons for PS4 Gamepad) at the same time. The Status LED of Converter will **turn off** to indicate it has entered setting mode.

step.2

Press the SELECT and START buttons (Press the SHARE and OPTIONS buttons for PS4 Gamepad) at the same time to clear the customized setting.

step.3

Press the PS button to exit the setting mode. The Status LED of Converter will **turn on** to indicate that it has exited the setting mode.

For more Details please visit our official website at
www.brookaccessory.com

version 201804pV1

www.brookaccessory.com